

FORM NUMBER: 234-0046-01

PRINT DATE: JANUARY 1985

 
SUPERSEDES: 234-0046-00

owner/user instructions

FOR SHOWROOM TRUCK

MODEL

112

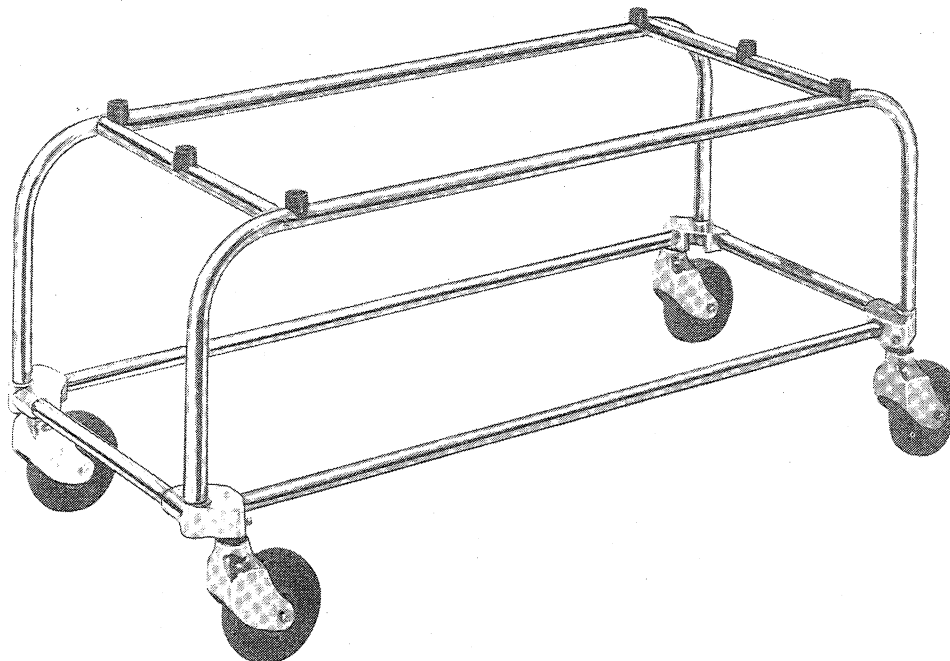

IMPORTANT

THIS MANUAL HAS BEEN PREPARED TO INSTRUCT USERS IN THE ASSEMBLY AND OPERATION OF THE FERNO MODEL 112 SHOWROOM TRUCK.

THE MODEL 112 SHOWROOM TRUCK IS DESIGNED TO SUPPORT ONE CASKET, FOR THE PURPOSE OF DISPLAY, OR FOR TRANSPORT BY ROLLING ON WHEELS.

READ THIS MANUAL COMPLETELY BEFORE USING THE SHOWROOM TRUCK. IF THERE IS ANY INSTRUCTION THAT YOU DO NOT CLEARLY UNDERSTAND, CONTACT CUSTOMER SERVICE FOR ASSISTANCE.

ESTABLISH REGULAR INSPECTION PROCEDURES AND RESPONSIBILITIES TO INSURE PROPER MAINTENANCE AS DESCRIBED.

RETAIN THIS MANUAL FOR FUTURE REFERENCE. INCLUDE IT WITH THE SHOWROOM TRUCK IN THE EVENT OF TRANSFER TO NEW OWNERS OR USERS.

SERIAL NUMBER

DATE RECEIVED

PURCHASED FROM



 
EC REP

FERNO S.r.l.
via B. Zallone, n. 26, 40066
Pieve di Cento, Bologna, Italy
+39.051.6860028 234-3468-02



FERNO
70 Weil Way
Wilmington, OH 45177-9371
(800) 733-3766
(937) 382-1451

COMPONENTS

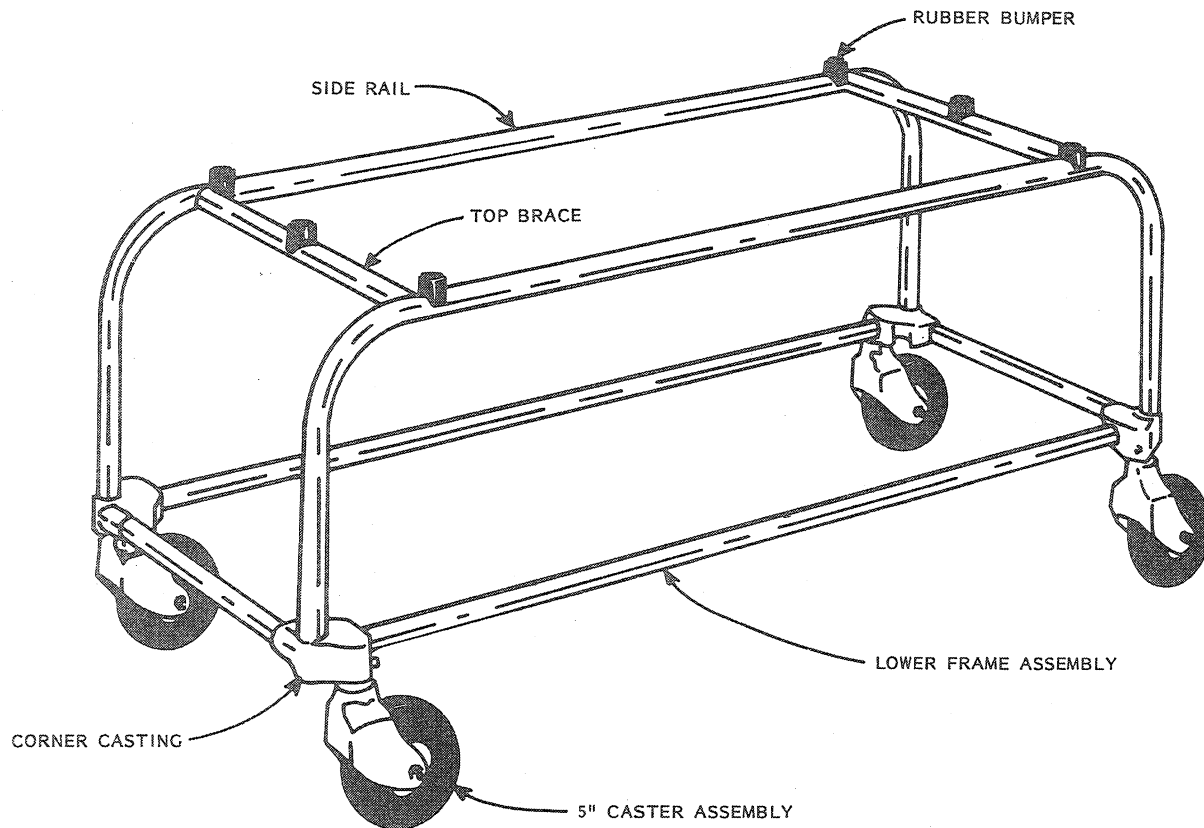

SPECIFICATIONS

LENGTH	47 in./119.38 cm.
WIDTH	22 in./ 55.88 cm.
HEIGHT	21 in./ 53.34 cm.
WEIGHT	19 lb./ 8.64 kg.
MAXIMUM LOAD*	1000 lb./454.46 kg.

* Exceeding this limit may cause damage to the showroom truck.


The policy of Ferno-Washington, Inc., is one of continual improvement in design and manufacture. Therefore, specifications are subject to change without notice.

PREPARATION


Uncarton and remove all packing material from the individual parts of the showroom truck. It is good to check at this point for any damage to parts which may have occurred during shipment.

ASSEMBLY


Place the lower frame assembly on a flat surface. The polished side of the corner castings should be facing up. Insert the two side rails into the holes in the corner castings.

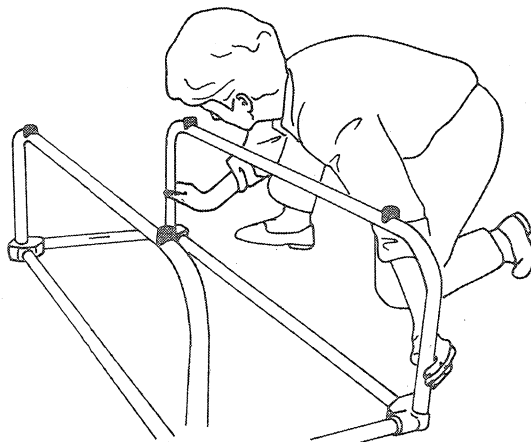


Install the two top braces between the side rails as shown and tighten securely with the four 1 3/4" round head bolts supplied.

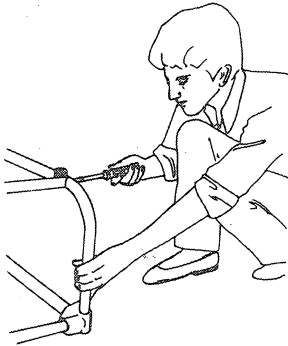

Turn the showroom truck over so that it rests on its rubber bumpers. Fasten the siderails to the lower frame assembly by inserting a 1/2" socket head cap screw into the tapped hole in each corner casting and tightening securely.

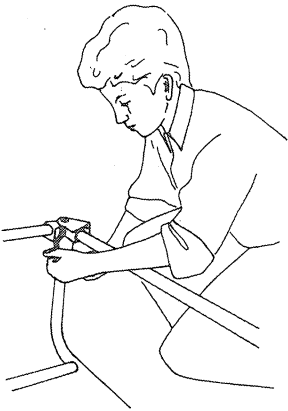

Install the 5" caster assemblies by inserting the stem pin of each caster into the holes on the bottom side of the corner castings, making sure the holes in the stem pin line up with the tapped holes in the corner castings. Fasten the caster assemblies to the corner castings with the 1/2" socket head cap screws and tighten securely.

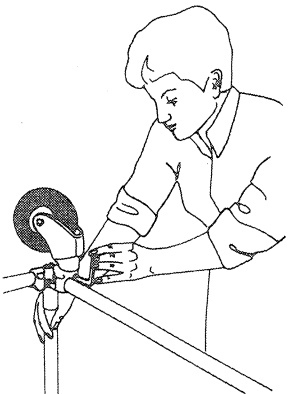

EXAMPLES OF USE

CASKET PLACEMENT: Position the casket so that its weight is balanced and evenly distributed to all four wheels. In addition, strap the casket to the truck to aid in security when the truck is rolled.

ROLLING THE TRUCK: The showroom truck is best rolled by pushing from one end. If a low obstacle such as a door sill is encountered, roll up to it, lift/pull front wheels over obstacle and repeat for trailing wheels. **CAUTION:** WHEN LIFTING TO ROLL OVER AN OBSTACLE, GRASP TRUCK FRAME, NOT THE CASKET.

ACCESSORIES

Accessories available for use with the Model 112 showroom truck include drapes; drape frame attachments, and utility straps. Consult your Ferno mortuary products catalog or distributor for product number and a complete description.

INSPECTION AND MAINTENANCE

One of the most important aspects of any maintenance program is regular inspection. Such inspection should include looking for anything that might affect the integrity of the showroom truck; broken or bent parts, missing fasteners, etc. Inspect at least once a month, more often if it is subjected to unusual stress or heavy use. If at any time the showroom truck does not operate properly or if damage is found, **TAKE IT OUT OF SERVICE** until repair or replacement can be made.

Exposed metal parts are polished, plated, or otherwise treated for easy care and attractive appearance. To protect these surfaces, clean with a mild solvent or soap and water twice a year or as often as needed. Cleaning should be followed by a coat of good wax such as used on automobiles.

CUSTOMER SERVICE

The serial number is stamped on a plate attached to one of the lower cross tubes of the showroom truck. It should be recorded with other pertinent information in the space provided on the front cover of this manual.

If it becomes necessary to order a replacement part, a reference to both model number and serial number will help us supply the proper parts.


Should questions arise regarding the use or care of this product that are not covered clearly in this manual, our customer service representatives will be happy to assist. They can be reached directly at the Ferno Division of Ferno-Washington, Inc., 70 Weil Way, Wilmington, Ohio 45177-9371. Phone: 513/382-1451.

LIMITED WARRANTY

Any product claimed defective and caused by material or workmanship within one year after date of purchase will receive prompt investigation and a fair adjustment.

Obligation is limited to replacement or repair of defective components.

REPLACEMENT PARTS

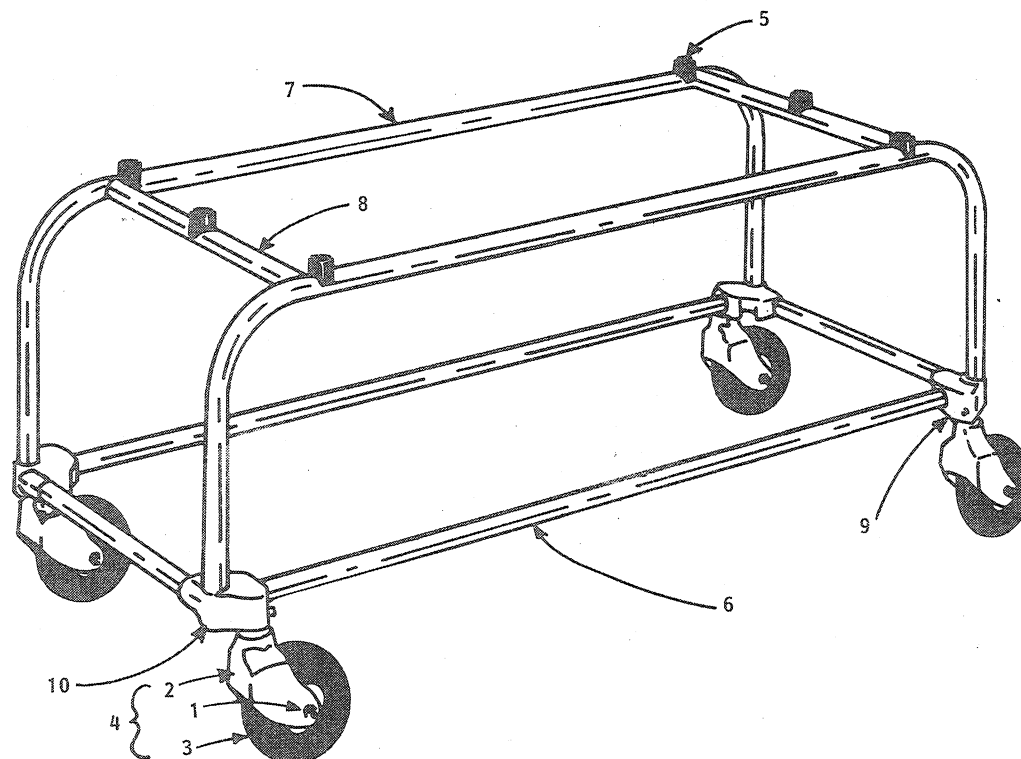

NOTE: PLEASE ORDER BY
PART NUMBER . . . NOT ITEM

ITEM	DESCRIPTION	QTY.	PART NUMBER
1	AXLE BOLT W/NUT	1 EA.	090-0180-00
2	WHEEL FORK W/SHANK PIN	1 EA.	090-0070-00
3	5" WHEEL W/BEARINGS, AXLE BOLT W/NUT	1 EA.	090-0060-00
4	5" SWIVEL CASTER ASS'Y COMPLETE	1 EA.	090-0080-00
5	RUBBER BUMPER W/SCREW	8 EA.	090-1110-00
6	LOWER FRAME ASSEMBLY	1 EA.	090-1560-00
7	CURVED SIDERAIL	1 EA.	090-1570-00
8	TOP CROSS BRACE	1 EA.	090-1580-00
9	CORNER CASTING RIGHT W/MT. HARDWARE	1 EA.	090-1563-00
10	CORNER CASTING LEFT W/MT. HARDWARE	1 EA.	090-1564-00