



Kit 069-5796 Side Extension Panel

Description


Kit 069-5796 includes a Side Extension Panel (SEP), two support arms, and the instructions to assemble and use a SEP with a Ferno® 101-H, 102, or 103 embalming table. The SEP is designed to provide additional width to an embalming table for bariatric use and also serves as a splash guard.

Kit 000SEPKIT is for a Ferno® 101-H embalming table only, and includes two sets of kit 069-5796 as well as two sets of kit 069-5797 (SEP storage kit for Ferno® 101-H embalming tables). Please refer to manual 234-3497 for instructions on how to install the SEP storage kit.

Parts Supplied (069-5796)*

<u>1 ea</u>	<u>Side Extension Panel (SEP) Assembly</u>
<u>2 ea</u>	<u>Support Arm Assembly</u>

*** Note:** Kit 000SEPKIT contains two sets of the components listed above, plus two sets of the components of kit 069-5797. Please refer to manual 234-3497 for instructions on how to install the SEP storage kit for a Ferno® 101-H embalming table.

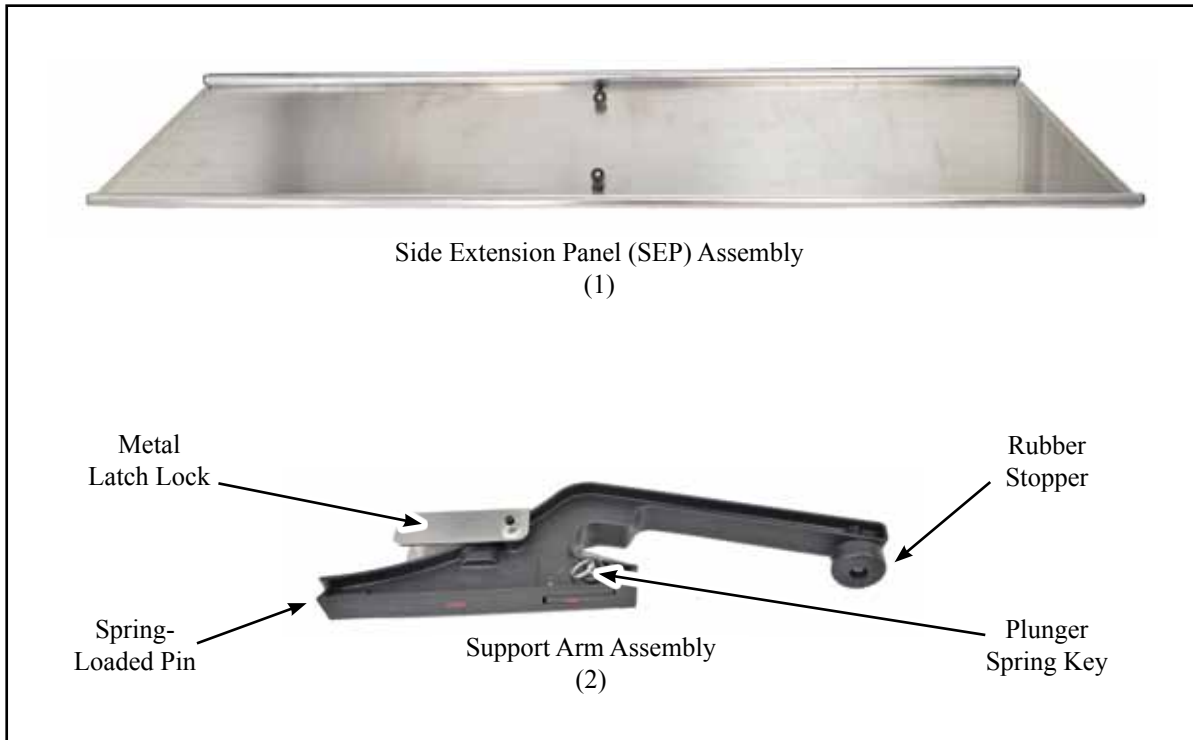

069-5796 Kit Components

Note: Kit 000SEPKIT contains two sets of the components listed above.

1 - ASSEMBLE AND ATTACH THE SEP

1. Place the SEP on a surface bottom side up (Figure 1).



Figure 1 - Place SEP Bottom Side Up

2. Align the spring-loaded pin in the Support Arm Assembly with the hole in the SEP (Figure 2).
3. To release the latch, pull the ring, and then press the latch down.
4. While applying downward pressure, press the latch on the Support Arm Assembly down to snap the Support Arm Assembly into place (Figure 2).
5. Once snapped in, pull upwards on the Support Arm Assembly to verify that it locked into place.

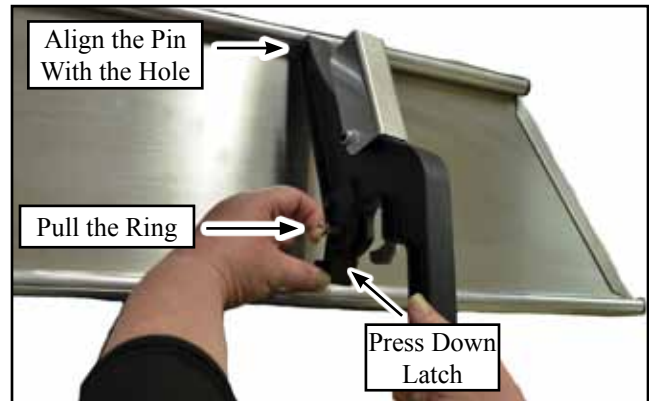


Figure 2 - Attach a Support Arm Assembly to the SEP

6. Repeat steps 2-5 on the opposite end of the SEP.
7. To attach the SEP assembly to the embalming table, simultaneously press each metal latch lock while sliding the Support Arm Assembly onto the embalming table (Figure 3).



Figure 3 - Attach the SEP to the Embalming Table

8. Verify that both rubber stoppers of each support arm assembly are firmly resting against the bottom of the embalming table.



Figure 4 - Verify the Rubber Stopper is Firmly Resting Against the Bottom of the Embalming Table

9. If the rubber stopper is not against the bottom of the embalming table, turn the wingnut counterclockwise to loosen the assembly (Figure 5).



Figure 5 - Loosen the Wingnut

10. Adjust the rubber stopper by turning it counterclockwise till it firmly rests against the bottom of the embalming table (Figure 6).



Figure 6 - Adjust the Rubber Stopper

11. Once adjusted, re-tighten the wingnut by turning it clockwise (Figure 7).



Figure 7 - Re-Tighten the Wingnut

12. The attached SEP will look like the one in Figure 8.



Figure 8 - SEP Attached to the Embalming Table

2 - DISINFECT THE SEP

2.1 Disassemble the SEP

1. Pull the ring to release the latch while firmly pulling the support arm assembly up to unlock and remove the support arm assembly (Figure 9).



Figure 9 - Remove the Support Arm Assembly

2. Repeat step 1 with the second support arm assembly.
3. Loosen and remove the four threaded knobs on the SEP (Figure 10).



Figure 10 - Remove the Knobs on the SEP

4. Remove both brackets with tubes attached on the SEP (Figure 11).



Figure 11 - Remove Brackets and Tubes From the SEP

2.2 Disinfect the SEP

1. Clean all surfaces of the SEP with a hard-surface disinfectant/cleaner such as SaniZene®. Follow the instructions on the container for application methods and required contact time.
2. Hand wash the Support Arm Assembly with soap and warm water. Rinse well with clear water, and dry with a towel.

2.3 Re-Assemble the SEP

1. Place the bracket of the longer tube onto the threaded bolt near the bottom (longer end) of the SEP (Figure 12).
2. Place the bracket of the shorter tube onto the threaded bolt near the top (shorter end) of the SEP.



Figure 12 - Re-Attach the Tubes to the SEP

3. Thread one inverted knob onto each of the bolts on the SEP.
4. Tighten one threaded knob into each of the holes of the tubes.
5. Use steps 2-5 on page 3 to attach the support arm assemblies to the SEP.



Figure 13 - Re-Attach the Knobs

NOTES

Ferno Customer Relations

Customer service and product support are important aspects of each Ferno product. For assistance or information:

CANADA AND THE U.S.A.

Telephone (Toll-free)	1.877.733.0911
Telephone	1.937.382.1451
Fax (Toll-free)	1.888.388.1349
Fax	1.937.382.1191
Internet	www.ferno.com

ALL OTHER LOCATIONS

For assistance or information, please contact your Ferno distributor. If you do not have a Ferno distributor, please contact Ferno Customer Relations:

Telephone	+1.937.382.1451
Fax	+1.937.382.6569
Internet	www.ferno.com

Ferno-Washington, Inc.
70 Weil Way
Wilmington, Ohio 45177-9371

Repairs or Parts



EMSAR® is the only organization authorized by Ferno to manage, service, and repair Ferno products.

Telephone (Toll-free)	1.800.73.EMSAR
Telephone (Worldwide)	1.937.383.1052
Fax (Worldwide)	1.937.383.1051
Internet	www.EMSAR.com



FERNO S.r.l.
via B. Zallone, n. 26, 40066
Pieve di Cento, Bologna, Italy
+39.051.6860028 234-3468-02

Limited Warranty Statement

The products sold by Ferno are covered by a limited warranty, which is printed on the invoice you received when you purchased the product. Please refer to the warranty terms as printed on your invoice. The complete terms and conditions of the limited warranty, and the limitations of liability and disclaimers, are also available upon request by calling Ferno at 1.800.733.3766 or 1.937.382.1451.

